




# User Manual

## Sound Level Decibel Noise Meter

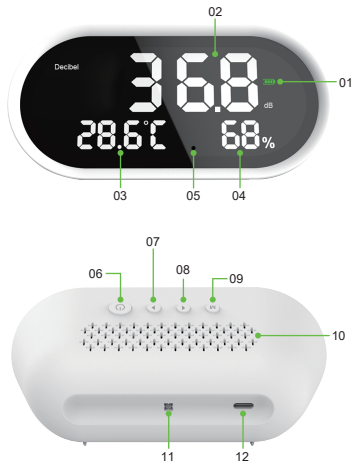

01	Battery	02	Noise reading
03	Temperature	04	Humidity
05	Probes ( Microphone sensor )	06	Power button
07	Right button	08	Left button
09	M button ( setup button )	10	Air Inlet
11	Humidity sensor	12	Type-C Port

## GET STARTED - HOW TO USE

**Step 1:** Short press the power button to turn it on.

**Note :** If the device does not power on right away, then please charge it first. Plug in the decibel meter using a standard cell phone adapter plug.

**Step 2:** Long Press the M button 2 seconds to switch temperature units between Celsius degree and Fahrenheit degree.

**Step 3:** Adjust the screen brightness to your desired setting by pressing the Left Button and Right Button.

**Note :** Short press Left button to increase brightness, press Right button to decrease brightness.

**Step 4:** In the power on state, press and hold the power button for 2 seconds to turn it off.

**Step 5:** Charge it using the coming Type-C cabel. The battery level indicator displays red when charging, and green when fully charged.


## How to Interpret Readings

	Quiet / Comfortable	Noisy	Loud	Extremely Loud
Decibel Reading	<60	60 - 75	75 - 85	>85

	Comfortable	Uncomfortable
Temperature	15°C - 26°C 65°F - 79°F	<26°C or >15°C <79°F or >65°F
Humidity	30 - 60%	<30% or >60%

## Considerations & Precautions

- **DO NOT** touch or poke the Microphone Sensor! It is NOT a reset button. Doing so will damage the product and invalidate the warranty.

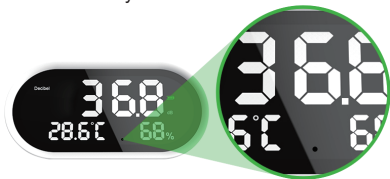

- **DO NOT** use chemicals or solvents to clean the product as residual fumes will skew air quality readings.
- **DO NOT** put water or other liquids on or near the product to avoid electrical damage.
- **DO NOT** allow unauthorized modification or repair of this product.
- **DO NOT** take apart or disassemble this monitor. Doing so may damage the product and will invalidate the warranty.
- This decibel meter is meant to be used indoors and kept dry at all times. It is strongly recommended to store in a cool, dry place.